























CISS Ink Cartridge

No.	Photo	Model	Color	Use for on
1	1811-M03		4C	Expression Home XP-30/XP/102/ XP-202/XP-205/ XP- 305/XP-402/ XP-405
2	L731-M03		4C	EPSON C90/T11/CX3900/ CX5900/CX7300/ CX5500
3	L731-M03		5C	EPSON T30/C110
4	L731-M03		6C	EPSON R270/T50/60
5	L731-M10 (S22)		4C	EPSON C90/T11/CX3900/ CX5900/CX7300/ CX5500
6	L731-M10 (S22)		5C	EPSON T30/C110

7	L731-M10 (S22)		6C	EPSON R270/T50/60
8	L63-M03		4C	EPSON C63/C64/C65/C67/R250/C X4500/CX6500
9	L63-M03		6C	EPSON R200/R210/R220
10	L63-M03		8C	EPSON R1800/R800
11	L63-M04		4C	EPSON C63/C64/C65/C67/R250/C X4500/CX6500
12	L63-M04		6C	EPSON R200/R210/R220
13	L63-M04		8C	EPSON R1800/R800

14	EP5852		4C	Epson PM200/240/260/280/290/ 210/250/270
15	1240-A6		4C	LC73/LC75/LC77/ LC79/ LC1280
16	985-A6		4C	Brother LC975/LC39
17	980-A7		4C	BROTHER 980/990/LC1000/LC61/ LC38/ Dcp-145c/165c/250c
18	HP564		5C	HP Photosmart C5324/C5370/D5460/ D5463/C6380/HP Photosmart D5468
19	HP920		4C	HP6000/HP7000/HP920
20	HP801		6C	HP8238/3108/3308/ C5188/C618/D7168/ D7368

21	HP10/11		4C	HP88/HP1000/HPK550/HP1100/K850/HP120/ HP130
22	520/521		5C	CANON IP4600/4680/3600/ MP988/MP638/MP545
23	5B/8C		4C	IX4000/IX5000
24	5B/8C		5C	CANON IP4200/IP4300/IP4500/IP5300/IP950/IP830/IP800/MP500